

Panasonic KXTD 816 and 1232– System Time Change

To change the time on your Panasonic KXTD 816 and 1232 systems, follow the instructions below:

1. The time can be changed from the first extension, usually extension 201. This must be a display type telephone.
2. Press the program key (or pause), followed by the * key twice, followed by 1234
3. Enter 000 and press the 'Sp-phone' key twice.
4. Enter the hour (2 digits), followed by the FWD/DND key, enter minutes (2 digits), followed by the FWD/DND key
5. Press the AUTO ANSWER key to select between AM or PM.
6. Press the AUTO DIAL key, followed by HOLD and then Program (or Pause) to exit