

Panasonic KXTDA 15, 30, 100, 200, 600– System Time Change

To change the time on your Panasonic KXTDA Series system, follow the instructions below:

1. The time can be changed from the first extension, usually extension 201. This must be a display type telephone.
2. Press the program key, followed by the * key twice, followed by 1234
3. Enter 000
4. Enter Year (In 2 digital format EG 08)
5. Press Right – Enter Date (in 2 digit format EG 01-31), Press Enter
6. Press Next, Enter Hour (EG 01-12) then Minute (00-59)
7. Select AM or PM
8. Press enter then press End / Hold